

Provides the FMT-400 with the ability to use the FMT-FC256 flash memory card.

Introduction

The 400-F-256 module provides the FMT-400 modular system with the capability to utilise the Colter Products' FMT-FC256 Flash memory card.

The FMT-FC256 is an auxiliary source of memory storage. There are three modes in which the FMT-FC256 can be utilised within the 400-F-256 module and therefore the FMT-400, these are:

- * Program storage: Build a library of different programs on different cards.
- * Program storage with auto-update: Automatically updates FMT-400 with program present on the FMT-FC256.
- * User data store: For instance in data logging applications.

For more information on the FMT-FC256 please see the separate FMT-FC256 datasheet.

Please note that the 400-F-256 module can only be used with the 400-CPU-B and 400-CPU-C modules. For more information on the CPU modules please see the relevant data sheet(s).

General Specifications

Storage temperature -20 to +70 °C
Operating temperature 0 to 55 °C
Humidity 0-90%
Weight 490g

Dimensions Standard FMT-400 size single width module

Current consumed from rack 100mA from rack power supply



Colter Group


Useage Details

To use the FMT-FC256 flash memory card with the 400-F-256 module it should be inserted into the slot in the front of the module with the label of the FMT-FC256 facing the right hand side of the module.

When the card has been correctly inserted the 'Card In' led will illuminate. For more deatils on the useage of the FMT-FC256 flash memory card please see the FMT-FC256 datasheet or Flex32 help.



Important Note: When using the flash card (FMT-FC256 to store user programs. You must ensure that the exactly the same firmware that was present in the CPU module when the program was downloaded to the flash card is also present when the program is loaded back from the flash card into the CPU module. Failure to do this will probably lead to the program that is in the flash card being unable to be run in the FMT and will probably cause errors and/or warnings to be raised.

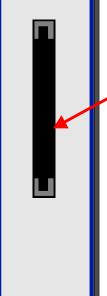

Insert FMT-FC256 flash card into this slot.

Label on FMT-FC256 should face right hand side of module.

LED Descriptions

 Label Card In
 Colour Yellow
 Description Illuminates when FMT-FC256 is inserted correctly into 400-F-256 module.

 Program
 Yellow
 Illuminates when the CPU module is programming data into the FMT-FC256 flash card.

 Active
 Yellow
 Indicates activity within the module, this will normally flicker or appear to be constantly illuminated, activity occurs when the CPU module is reading or writing data to the 400-F-256.



Group



Data Sheet Issue: 1.10 Date: 11 May 2005

Order Codes

Part Number 400-F-256

COLTER PRODUCTS LIMITED

UNIT 7, ZONE C CHELMSFORD ROAD INDUSTRIAL ESTATE DUNMOW ESSEX CM6 1HD

Telephone: + 44 (0)1371 876887 Fax: + 44 (0)1371 875638

E-Mail: sales@coltergroup.co.uk Web Site: www.coltergroup.co.uk

© Copyright 2000

The unit described on this datasheet is designed and manufactured in Great Britain by Colter Products Ltd.

Colter Products reserve the right to amend these specifications and the user is asked to check the validity of the datasheet prior to use



Colter Group